

WiFi Wireless Controlled Devices



YE-880(IOT)-T1(W) Air-conditioner Remote Controller



Switch on/off and setting for air-conditioner/heater/cooler.
Detect indoor temperature and feedback update status to App.

Specification:

Power supply: USB port DC5V
Max. Remote control distance: 10M

Instruction for installing:

1. Scan QR code showed on device or user manual, download and install the App.
2. Use a pin to insert the "Reset" hole located at the side of the device for switching, then release. Around 6 seconds later. The indicated led will be fast flashing, add this device to the App.
3. Stick the device with double sided adhesive tap at a suitable location: Far from the air-conditioner within 10M, within the range of 45° from IR transmitting pin.

4. After adding the device to App, then have to process emission code matching.

Click "☺" go to the control interface.

Click "Match" go to the matching interface; choose the Brand of air-conditioner /heater /cooler you are going to match.

Click "Scan" and the code matching processing. When there is a sound from the air-conditioner or it is turn on, click "stop" for stopping the matching.

Click "Check" to see whether the matching is well done.

If you can operate the function of air-conditioner, it means the matching is succeed. If there is no reaction from air-conditioner, moving arrow up and down for slightly adjustment.

Remark:

1. If the air-conditioner impossible to place at a suitable location, adjust the IR transmitting pin within slightly range.
2. Not to block the temperature detecting hole, that will make temperature displaying inaccurately.

