

# WiFi Wireless Controlled Devices



## YE-880(IOT)-T2(W) Air-conditioner Remote Controller

Switch on/off and setting for air-conditioner. No blind angle with 360 ° transmitting.



### Specification:

Power supply: USB port DC5V

Max. Remote control distance: 10M

### Instruction for installing:

1. Scan QR code showed on device or user manual, download and install the App.
2. Press the button on top of device at above 6 seconds, then release. Once the Infrared-Ray Indicated Ring surrounding the device will be fast flashing, add this device to the App.
3. When using, place this device at a suitable location: distance from air-conditioner should be within 8M, then function of no blind angle with 360 ° transmitting emission can be worked.
4. After adding this device to App, then have to process emission code matching.

Click "☰" go to the control interface.

Click "Match" go to the matching interface; choose the Brand of air-conditioner you are going to match.

Click "Scan" and the code matching processing. When there is a sound from the air-conditioner or it is turn on, click "stop" for stopping the matching.

Click "Check" to see whether the matching is well done.

If you can operate the function of air-conditioner, it means the matching is succeed. If there is no reaction from air-conditioner, moving arrow up and down for slightly adjustment.

